

OPERATION

The watch has two modes: Time Display mode and Game mode. In Time Display mode, you can view the current time, date and day of the week. In the Game mode, you can drag the scratch disc and press the three buttons to clear the music bars.

Time Display Mode

Showing the Current Time

To see the current time, drag the scratch disc clockwise or counterclockwise. The time appears at the right of the display. After about 22 seconds, the screen turns off.

To see the date, the day of the week, or the alarm setting, drag the scratch disc clockwise or counterclockwise. The date, day of the week, and the alarm scroll across the screen each time you drag the scratch disc.

You can change the scrolling direction at any time by dragging the scratch disc in the other direction.

Adjusting the Time, Day, and Date

1. Drag the scratch disc to show the time, then hold down **ADJUST** for about two seconds. The hour field flashes.
2. Drag the scratch disc clockwise or counterclockwise to increase or decrease the hour.
3. Press **ADJUST** to confirm when the correct hour appears. The minute field flashes.
4. Drag the scratch disc clockwise or counterclockwise to increase or decrease the minute.
5. Press **ADJUST**. The 12- or 24- hour display appears.
6. Drag the scratch disc clockwise or counterclockwise to select 12- or 24- hour format.
7. Press **ADJUST**. The year flashes.
8. Repeat steps 2–7 to adjust the year, month and date. Press **ADJUST** to confirm.

The current time displays after you complete all adjustments.

Setting the Alarm

1. With the time displayed, drag the scratch disc until **ALARM** appears, then press **ADJUST**.
2. Follow Steps 2-4 from “Adjusting the Time, Day, and Date” for instructions to set the desired alarm time, then press **ADJUST. ON**

or **OFF** appears. Drag the scratch disc in either direction to turn the alarm on or off. Press **ADJUST** to confirm.

Game Mode

There are two different Game modes: Practice and Challenge. To enter Game mode, press **MODE**. A DJ's hand dragging a scratch disc appears on the right side of the display. This is the Practice game. To change to the Challenge game, drag the scratch disc in either direction. A dancer appears next to the DJ's scratch disc. This is the Challenge game.

Playing a Game

1. To play a game, press **MODE** when you see the DJ's hand dragging the scratch disc.
2. Select the desired Game Mode (Practice or Challenge) by dragging the scratch disc in either direction, press **MODE**.
3. Select the music level by dragging the scratch disc in either direction, then press **MODE**.
4. Select the difficulty level (1 – 5) (the higher the level, the greater the difficulty), then press **MODE**. **READY** appears and the game begins.

A dancer and a horizontal bar appear on the right side of the screen. Music bars fall down on the left side of the screen. When the small bars cross the horizontal bar at the bottom of the screen, press the keys below the screen that correspond to their position.

Note: If more than one music bar reaches the horizontal bar at the same time, press the keys simultaneously.

5. Drag the Scratch Disc when the longest music bar crosses the horizontal bar. If you fail to press the keys or drag the scratch disc in time, the music bars pass through the horizontal bar, and you do not score points.


Scoring

The highest possible score is 99. If you score less than 50 points, **FAIL** appears; between 50 and 85, **PASS** or **OK** appears; more than 85, **GOOD** appears.


In a Challenge game, if you score 50 or more points, you automatically move to the next level. At level 5, if you score more than 50 points, you enter bonus level 6. The highest score from each level is saved. Press any key below the display to view the high scores.

Notes:

- Score is only kept in the Challenge Mode.
- If you do not press any keys for about 30 seconds, the watch automatically turns off.
- Press **ADJUST** to stop the game, then press it again to see the time.

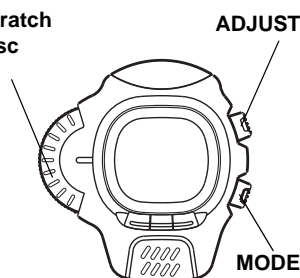

REPLACING THE BATTERIES

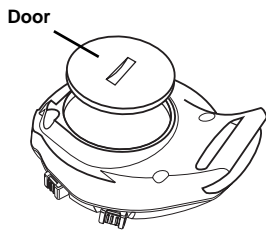

The watch comes with two CR2032 type lithium button-cell batteries for power. When the screen looks dim or the sound becomes weak, replace the batteries. For the best performance and longest life, we recommend RadioShack lithium batteries.

1. Use a coin to turn the battery compartment door counterclockwise until it pops out.


2. Lay down the compartment with the inside facing up.

3. Lift the release key on the side of the compartment and remove the half cap.

4. Remove the old batteries and insert fresh ones with negative polarity (–) facing each other.

5. Replace the cap.

6. Place the compartment back into the watch and use a coin to turn clockwise until it locks.

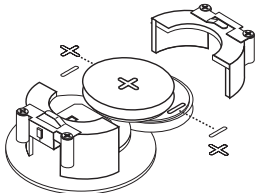

Note: Time/Day/Date/High Score are reset when the batteries are removed.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them. Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

Caution:

- Use only fresh batteries of the required size and recommended type.

- Always remove old or weak batteries. Batteries can leak chemicals that can destroy electronic parts.
- Do not mix old and new batteries, different types of batteries (standard or alkaline), or batteries of different capacities.

CARE

Keep the watch dry; if it gets wet, wipe it dry immediately. Use and store the watch only in normal temperature environments. Handle the watch carefully; do not drop it. Keep the watch away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the watch's internal components can cause a malfunction and might invalidate its warranty. If your watch is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Power Requirement	2 Lithium CR2032 Button-Cell Batteries
Battery Life	16 Months (for watch) 6 Months (for speaker)
Accuracy	±20 Second per Month
Dimension (without watch band) (HWD)	2 ³ / ₈ × 2 ¹ / ₈ × 1 ¹ / ₈ Inches (60 × 54 × 29 mm)
Weight (with Battery)	1.2 oz (35 g)
Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.	

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99